

ADJUSTABLE SELF CLOSING HINGES

TENSIONING THE SPRING FOR SELF CLOSING

(if you do not want the hinges to self close do no install the tension pins)

STEP 1

Insert the tension bar in hole at 9 o'clock position on tension wheel



STEP 2

Rotate tension bar towards the gate to the 3 o'clock position.



STEP 3

Install tension pin in hole at 9 o'clock position.



STEP 4

Rotate the bar back clockwise until the tension pin is against the hinge and remove bar.




STEP 5

Steps 1 thru 4 may be repeated one more time only. Be sure to apply equal tension to both hinges.



COMPLETED INSTALLATION

Picture above shows final configuration of tension hinge.

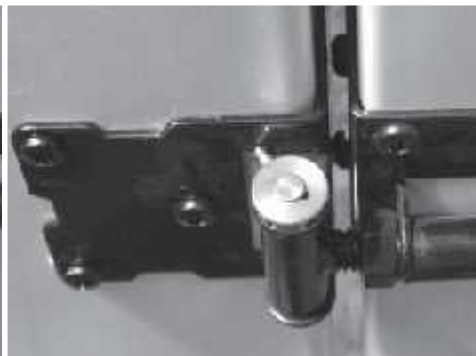

When installing the hinges on the right side of gate the tension wheel will be on the bottom of the hinge.

TO APPLY TENSION ALWAYS ROTATE THE TENSIONING BAR TOWARDS THE GATE.